



No.	PARTS NAME	No.	PARTS NAME	No.	PARTS NAME	No.	PARTS NAME
185	"E" washer	564	Alarm pin	944	Handle lock ring	1734	Drive gear
211	Set plate screws	601	Washer 1	1021	Yoke spring	1735	One-waybearing tube
215	Cover screw	631	Wrench	1105	Clutch spring	1736	Brake wrench braces
384	Ball bearing (S6700)	668	Side plate screws	1106	Yoke plate	1737	Pinion gear
389	Ball bearing (S695)	670	Close cover screws	1107	Clutch skid	1738	Thimble
391	One-waybearing	679	Washer 2	1120	Release bar	1739	Sound gear
392	Ball bearing (S105)	692	Knob cover	1121	Spool shaft	1740	Key washer A
393	Ball bearing (S128)	724	Bearing washers	1122	Clutch release bar	1741	Anti-reverseratchet
394	Ball bearing (S126)	725	Tension knob	1123	Lever wind washer	1742	Clutch release yoke
412	Yoke ratchet	731	Handle bolt	1130	Clutch dog	1743	Eared washer
435	Clutch lever screw	736	Sound spring plate	1159	Reel foot	1744	Key washer B
438	Anti-reversenail	742	Shaft spacer	1323	Bushing screw	1745	Bearing Vasse
440	Spool shaft nail	743	Drive shaft bushing	1328	Reel foot spacer	1746	Clutch lever bracket
446	Anti-reverse dog	745	Drive shaft washer	1373	Handle shaft coat	1747	Handle knob (EVA)
447	Anti-reverse plate	754	Fixed screw	1589	Strike alert lever	1748	Drag washer A
448	Click bracket	761	Thimble spring	1726	Fixing lever	1749	Drag washer B
449	Spring washer	767	Lock set	1727	Cast control bracket	1750	Drag washer C _0.5MM
451	Handle nut washer	779	Loose sleeve screw	1728	Star drag knob	1751	Right plate
460	Drive shaft shield	921	T handle nail	1729	Cast control screw	1752	Frame
463	Cast control spring	927	Alarm sound gear	1730	Side part for Release bar	1753	Spool
464	Click spring A	936	Bearing ring	1731	Close cover	1754	Transitional board
465	Bearing spring	937	Alarm spring	1732	Handle arm		
468	Yoke	943	Handle knob screw	1733	Drive shaft		