



No.	PARTS NAME	No.	PARTS NAME	No.	PARTS NAME
10	Handle shaft retainer	269	Plate support	326	Piston small washer
67	Push slice	271	Piston sealing washer	327	Sound silce
68	Alarm lever knob	274	Push button shaft	329	Spool shaft
110	Push button spring	275	Handle bolt	332	Drag tension knob
120	Cooling shield	278	Alarm crosspin support	345	Rod clamp
121	Right side plate	280	Stop shaft	347	Limited cover screw
122	Frame	281	Reel foot screws	348	Strike alert shaft
123	Left side plate	282	Lever hub nail	349	Strike alert nail
124	Spool	283	Gear shaft pin	352	Drag control lever cap
125	Front plate	284	Pre-program key pin	353	Drag control lever
126	Pressure plate	286	Sound nail	354	Limited cover
127	Drive shaft cover	288	"E" washer	355	Strike alert lever
128	Lever hub cover	290	Drive gear-high speed	356	Drag control lever arm
129	Friction washer	291	Drive gear-low speed	358	Fixed nuts-L
130	Harness lugs	293	Slide knob	360	Eccentric
131	Handle arm	294	"E" washer	361	Strike alert spacer
132	Drive shaft coat washer	296	Stopping bracket	362	Reel foot
133	Drag washer	297	Anti reverse dog	364	Strike alert shaft screw
153	Button base	300	Alarm sound slice	365	Alarm spring
154	Handle shaft coat	301	Spool spring washer	366	Limited button spring
169	Fixed nail	302	Spool washer	367	Strike stop
176	Alarm lever crosspin support	303	Low speed pinion gear	368	Alarm hammer
182	Spool nail	304	High speed pinion gear	371	Alarm limited coat
184	Stopping slice	305	Side plate screws	373	Limited button
187	"E" washer	307	Stopping bracket screw	386	Ball bearing
202	Handle knob screw	308	Spool drag screw	527	T handle nail
205	Harness lugs screw	309	Piston screw	529	Handle shaft coat washer
206	Retainer screw	311	Alarm lever base spring	556	Ball bearing
209	Alarm lever screw	312	Shaft insert spring	717	Handle shaft fixed screw
214	Push slice screw	313	Drive shaft spring	719	Shaft screw
224	Pre-program plate washer	314	Stopping block spring	723	Wrench
227	Dragcontrol lever thrust ring	315	Spool shaft spring	904	Fixed screw
250	Anti-reverse ratchet	316	Sound nail spring	905	Handle knob
257	Slide coat	318	Dragcontrol lever washer	906	Drive shaft
258	Drive shaft screw	319	Dial washer		
259	Piston cover	321	Alarm lever base		
260	Piston base	322	Various speed washer		
261	Pre-program screw	323	Gear washer		
262	Pre-program key	324	Rubber ring		
264	Fixed nuts	325	Piston big ring		